



INSTRUCTIONS FOR USE, MAINTENANCE AND SAFETY







Dear Customer,

Thank you for purchasing a semi-automatic GRAND POWER STRIBOG. We appreciate your trust in our products. This gun is made in Slovakia, with great care and precision to detail. Using cutting-edge technology, the STRIBOG is machined from high quality materials on high-precision CNC machines.

Before using your firearm, please familiarize yourself with this instruction manual, while paying particular attention to the safety information.

Improper and careless handling of a firearm can cause an unintended discharge, which could result in serious injury or death, as well as damage to property. The same consequences can be caused by arbitrary adjustments, corrosion, excessive carbon buildup or the use of non-standard ammunition. In such cases the manufacturer cannot be held accountable for any possible losses or consequences.

Before this model was put into commerce, it was carefully tested, inspected and packaged. GRAND POWER Ltd. cannot be responsible for, nor control, the handling of a weapon after it leaves the factory, so please check that the gun is not loaded and that there is no visible damage.

This manual with instructions should always be attached to the firearm's packaging, under any and all circumstances.









SAFETY INSTRUCTIONS

Always follow the safety instructions for your own safety and for the safety of others.

- 1. Always treat a gun as if it is loaded.
- 2. Never point your gun at anything you do not intend to shoot.
- 3. Do not trust anyone declaring that the gun is not loaded: check for yourself, as you will ultimately be responsible if an accident occurs.
- 4. Before putting the gun away, setting it down or handing it over to another person, always make sure that it is not loaded. In the event you hand the gun to another person, you should first show them that it is not loaded.
- 5. Store the gun unloaded with the hammer in the forward position.
- 6. Never use the gun for any purpose other than shooting.
- 7. Do not leave the gun unattended; be especially careful when the gun is loaded and ready to fire.
- 8. Prior to loading the firearm, make sure that the barrel rifling, chamber, and slide are clean and clear of obstructions. Clean all the residue from previous shooting as soon as possible.
- 9. Always use clean, dry and originally manufactured ammunition of high quality, in good condition, matching the caliber of your weapon.
- 10. Never drink alcoholic beverages or use drugs before and/or during shooting. Check all the medication you take for possible influences on your cognitive abilities and control of movement, possibility of cramps, etc.
- 11. Wear ear protection and proper safety glasses when shooting.
- 12. When the weapon is loaded and cocked, keep the safety in SAFE position until you are ready to fire. Always aim in a safe direction and consider what is behind the area of your target.
- 13. Do not block the ejection port and make sure that no person or another obstacle are in the way of ejected case.







- 14. Never pull the trigger or put your fingers into the trigger guard area unless you are aimed at your target and ready to shoot.
- 15. Before pulling the trigger, be sure to do a supplemental check on your target, as well as the area behind it. Projectile is able to fly through or away from your target and can travel hundreds of meters.
- 16. Do not shoot against a flat hard surface, on the surface of water or in any other direction that poses a risk of ricochet.
- 17. Do not fire the weapon in the vicinity of an animal, unless it is trained to accept the noise.
- 18. While handling the gun, never engage in a horseplay.
- 19. Failure to fire: In case of a failure to fire, hold the gun aimed at your target (or in a safe direction), and wait for at least thirty seconds. In case of a delayed ignition, the round will normally go off within 30 seconds. If the round fails to go off, remove the magazine, extract it from the chamber and check the primer. If the strike mark on the primer is weak, not in the center or there is no strike, get a qualified gunsmith to verify that your gun works properly. If pulling on the cocking handle fails to eject a round, please refer to your gunsmith, bear in mind that the gun is always loaded!
- 20. Before cleaning, storage or transport, always make sure your gun is not loaded.
- 21. Store your gun separately from ammunition. Keep both in a safe locked space, out of reach of children and unauthorized persons.
- 22. Never alter any part of the gun, as this could seriously impair the gun's proper operation and/or safety by doing so.
- 23. Remember that corrosion, use of damaged ammunition, dropping the gun on a hard surface or other rough treatment can cause damage that may not be visible at first sight. In case of any such event have your firearm inspected by a specialist.









INSTRUCTIONS FOR USE

Ammunition

Use only originally manufactured ammunition of high quality, in good condition, matching the caliber of your weapon, in accordance with CIP or SAAMI regulations. Using non-standard ammunition can cause damage to the gun and/or injury to the shooter, also it voids the warranty.

Removing the magazine

Hold the gun's grip in your right hand and the upper part of the magazine in your left hand, so the thumb of the left hand can reach the magazine release. The magazine will release from the gun when you press the release catch.

Loading the magazine

Grasp the magazine with its lips facing up. Place the cartridge on the front of the magazine follower and push it down. Place another cartridge onto the previous one and slide it in the same way.

Do not try to exceed the magazine capacity as this can cause a malfunction.

Loading the gun

WHEN LOADING THE GUN, ALWAYS POINT THE MUZZLE IN A SAFE DIRECTION!

Insert a loaded magazine into the gun and make sure that it is properly retained by the magazine catch. Hold the gun with one hand and grab the cocking lever with the other hand. Cock the lever fully backwards and then release it. By doing this, the cartridge is chambered and the gun is now ready to fire. Before shooting please double-check that your hand and other parts of your body or any other objects are not in the way of the motion of cocking lever. Pulling the trigger causes a shot. The safety is engaged by rotating the manual safety to SAFE position.





Reloading during shooting

After shooting the last round, eject the empty magazine and and insert a full one. Cock the lever fully backwards with your hand and release it or push the slide catch with your thumb, causing release. The gun is now reloaded and ready to fire again.

Unloading and Safety procedure

POINT TO THE SAFE AREA

- remove the magazine
- cock the lever backwards and check there is no cartridge in the chamber or magwell
- release the slide
- pull the trigger (dry fire) while keeping the muzzle pointed in a safe direction

Safety of the gun

STRIBOG carbine is equipped with a SA (single action) trigger mechanism. Lower receiver, just above the handle, is equipped with a safety lever to select SAFE (marked by a cross) and FIRE (marked by a dot). Actual position is marked by the tip of a triangle mark on the lower receiver.

Remember that the safest way to secure any weapon is by unloading the gun, performing safety procedure and storing in a safe place.

Sight adjustment / Zeroing

Before shipping, the STRIBOG carbine is test fired at a distance of 25 m so that the middle point of impact approximately matches the point of aim. Flip sights supplied with the gun are only intended as a backup for temporary use in case optical or electronic sights should fail.









INSTRUCTIONS FOR MAINTENANCE

Disassembly for cleaning

- 1. Remove the magazine (Fig.1)
- 2. Verify that there is no round in the chamber or magazine well.
- 3. Using appropriate punch, drive the rear assembly pin partially out of the lower receiver of the gun. Do not remove the pin completely. You will hear a click as a pin rests in proper disassembly position, so use caution when using a punch to prevent complete removal of the pin. (Fig. 2,3)
- 4. By pulling on the handle, separate the rear part of the lower receiver from the upper receiver. (Fig. 4)
- 5. There is spring tension on the stock mount, so be careful while performing next steps. The stock mount shall be depressed or lightly taped downwards. Make sure that you are holding the upper receiver and the stock mount firmly while doing this. Spring tension should force the stock mount out of the upper receiver. You can slightly pull on the stock mount if the spring tension does not remove it from the upper receiver properly. (Fig. 5)
- 6. Remove the buffer, spring guide rod and the spring from the upper receiver. (Fig.6)
- 7. By pulling on the charging handle, align the charging handle with the opening (slot) on the charging handle travel path in the upper receiver. (Fig. 7)
- 8. When the charging handle is properly aligned with the slot, pull the charging handle away from the receiver in order to remove it.
- 9. When the charging handle is fully removed, you can remove the bolt assembly from the gun by tilting the upper receiver. (Fig. 8)
- 10. Now the gun is properly disassembled for cleaning.







Warning:

Do not disassemble any other part of the weapon. If you believe that your firearm requires adjustment or a repair, take it to a gunsmith for service. Do not attempt to pull on the charging handle when the safety is engaged (safety lever is in safe position) as this may result in damage to the weapon.

Assembly:

Takes place in reverse order of disassembly. Pressing on the red buffer by the thumb of the hand holding the upper receiver may help when placing the stock mount back to the upper receiver.

Cleaning of the gun:

When to clean your gun

- after each use
- if you get your gun wet
- as soon as possible after shooting
- at least once a year in temperate climate
- at least once a month in extreme climate

Barrel bore and cartridge chamber cleaning:

You should clean the barrel before you fire your new gun for the first time.

After firing your gun, clean the barrel bore and cartridge chamber with the clean patch attached to the cleaning rod. Replace the patch for as long as necessary until the last patch is clean. If the barrel's bore is very dirty or there is a carbon build up, apply a gun cleaning solution to it and to the chamber, let it act for at least 10 minutes (exposure time may vary depending on the cleaning agent being used, please refer to user manual of the cleaning solvent), then clean using the proper brush.









Dry the bore and cartridge chamber with a clean patch and make sure that all residues have been removed. Repeat the procedure if necessary.

The cleaning rod and the brush needs to be inserted into the barrel through the chamber, in order to avoid muzzle damage. Move the brush all the way through the barrel. If you try to change direction of movement while the brush is still in the barrel, the brush could jam in the barrel. Only use dedicated barrel bore cleaning brushes in the correct calibrate.

Cleaning other parts of the weapon:

Clean other parts of the gun (including the external surfaces of the receiver) with a dry cloth and suitable brush or wooden scraper. You can use preservation oil or kerosene during cleaning.

However, avoid using solutions designed for cleaning bore. These are highly corrosive and could remain in the joints between components and subsequently cause serious corrosion damage.

Make sure that the remains of cloth or brush bristles are not left in any part of the gun.

Preservation

Wipe the bore, cartridge chamber, and all the accessible parts after cleaning with a lightly oiled cloth or oil spray. Wipe off excess oil.

Before shooting, wipe the barrel's bore dry. If you are using the gun at very low temperatures make sure to remove the oil from all accessible parts or use special lubricant designed for these conditions as the change in viscosity of standard lubricants may cause malfunctions at very low temperatures.

Only use preservative grease for long-term storage in demanding climatic conditions and remove it all carefully before using the gun again.





Warranty

The manufacturer provides to the original retail customer a limited warranty for a period of two (2) years from the date of purchase which covers defects of material and manufacturing defects. It will be the discretion of the producer and importer as to whether the parts/labor or replacement will result in a charge to the customer. The importer or producer has the right to research, inspect and test the weapon to assess any claim made under the warranty.

Warranty exclusions

The warranty is VOID if the firearm has been altered, abused, misused, damaged by accident, fired with hand loaded or reloaded ammunition, obstructions in the barrel or damage due to failure regular and necessary maintenance. Also this warranty is VOID if any unauthorized repair or alteration is performed on the firearm.

Limited warranty

GRAND POWER s.r.o., Priboj 558, 976 13 Slovenska Lupca, Slovensko, warrants to the original purchaser that this GRAND POWER firearm will be free from defects in material and workmanship under normal use for a period of one year from the date of purchase. Under this warranty, GRAND POWER s.r.o. shall repair or replace any defective part, or at our opti on, exchange the firearm within a reasonable time and without charge. Claims under this warranty should be submitted in writing the stated one-year period, together with proof of the date of purchase and the firearm (insurance and shipment prepaid by the purchaser) to an authorized warranty center identified at www.grandpowerusa.com Return shipment and insurance shall be paid by GRAND POWER s.r.o. provided the claim is covered by this warranty. This warranty shall be waived if the claimed defect or malfunction was caused by neglect, abuse, careless handing, unauthorized adjustments, alterations or modificad ons, improper ammuniti on, or unreasonable use.









GRAND POWER s.r.o. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BODILY INJURY PROPERTY DAMAGE OR ECONOMIC LOSS UNDER THIS WARRANTY OR OTHER GROUNDS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO, THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This Warranty gives you specific legal right, and you may also have other rights which vary from state to state. If you require assistance in connection with this Warranty, contact Global Ordnance LLC, 2150 Whitfield Avenue, Buildings A&B, Sarasota, FL 34243, Email: customerservice@globalordnance.com, www.grandpowerusa.com.

Lifetime service contract

Upon the expiration of the one-year Warranty, and for as long as this GRAND POWER firearm is owned by the original purchaser, GRAND POWER. offers to service and repair any defects or malfunction in this GRAND POWER firearm, excluding the finish, grips, sights or magazine, without charge. Requests for service should be submitted in writing, together with proof of purchase and the firearm (insurance and shipment prepaid by the purchaser), to an authorized service center identified at www.grandpoweruse. com. Return shipment and insurance shall be paid by GRAND POWER provided the service is covered by this service contract.

This service contract is extended only to the original purchaser, is not transferable, and shall be waived if the defect or malfunction was caused by neglect, abuse, careless handling, willful damage, damage caused by overpressure ammunition, or unauthorized ammunition, ordinary wear and tear, unreasonable use, or failure to provide reasonable and necessary maintenance as set forth in the instruction manual. Moreover, this agreement will not apply to those parts of your GRAND POWER firearm which have been "tuned" or "gunsmithed" for performance other than customized tuning and other services provided by an authorized service center.

www.grandpower.eu









Please complete and return the enclosed original purchaser registration card, found in you firearm's box, to assist us in providing this service to you. If you require assistance in connection with this service contract, please contact:

Global Ordnance LLC
2150 Whitfield Avenue
Buildings A&B
Sarasota, FL 34243
Email: customerservice@globalordnance.com
www.grandpowerusa.com

NOTICE: It is illegal to, among other things, ship firearm with ammunition in the firearm or in the same packaging. Firearms and ammunition must be shipped separately. Make sure you are in compliance with all local and federal laws when shipping a firearm for repair under this service contract to any authorized service center. You are solely responsible for understanding and complying with all state, federal, or other applicable laws or regulations regarding the shipment of firearms and/or ammunition.







instructions for use, maintenance and safety
AND POWER







The STRIBOG

















fig. 1

fig. 2

fig. 3

fig. 4









fig. 5

fig. 6

fig. 7

fig. 8







www.grandpower.eu

